





SIZE + INSTALLATION

APPEARANCE AND INSTALLATION:

The outline structure is shown in Figure 1. Liquid level transmitter (flexible wire input)

It consists of a shell, a diffused silicon core and a protective cap

Coreless shielded wire, probe can be customized.

INSTALLATION METHOD:

- (1) Choose a place that is easy to operate and maintain for installation; .
- (2) should be as far away from the vibration source installation;
- (3) should be as far away from heat sources as possible;
- (4) When the input level transmitter is installed, the metal probe should be sunk into the bottom of the container.

INSTALLATION PRECAUTIONS (CUSTOMER TERMINAL):

(1) If the customer connects the cable separately, waterproof measures (such as closure) must be taken Junction box, etc.). If not or relatively simple, the wire can be bent

Install it downward (as shown in the figure) to prevent water and avoid faults.

(2) The liquid level probe is put into the water, it is best to be fixed, and away from the water inlet.

